



Strobe light function

Change of flash pattern and synchronization:

Change of pattern: After the signal cable (blue) is connected to positive, it will change the flash pattern.

Reset and synchronization: Connect the blue cables between your Epix5+ Work bars, then connect to the positive pole (+) for 3 seconds to reset the flash pattern. Now, connect the signal cable (blue) to the positive pole (+) for 1 second to achieve asynchronous flashing. Repeat the process to achieve synchronized flashing.

NOTE: Asynchronous flash is only possible for two bars. When more than two bars are connected, the synchronized flash is the only option.

Strobe patterns:

1. Single flash synchronization: 2.2HZ
2. Single flash asynchronous: 2.2HZ
3. Triple flash synchronization: 1.1HZ
4. Triple flash asynchronous: 1.1HZ
5. Quadruple flash synchronization: 1.25HZ
6. Quadruple flash asynchronous: 1.25HZ
7. Combination of one long and five short synchronization: 0.83HZ
8. Combination of one long and five short asynchronous: 0.83HZ
9. Burst flash synchronization: 10HZ
10. Burst flash asynchronous: 10HZ

Warning:

1. Works under the specified voltage (DC9-36V)
2. This LED-bar becomes hot under continuous use - do not remove or touch the casing for at least 30 minutes after turning the light off
3. Keep heat-sink clean and exposed to maintain air flow